

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

1999-01 ELECTRICAL

Fuses & Circuit Breakers - S & T Series Pickups

IDENTIFICATION

CAUTION: When battery is disconnected, vehicle computer and memory systems may lose memory data. Driveability problems may exist until computer systems have completed a relearn cycle. See **COMPUTER RELEARN PROCEDURES** article in **GENERAL INFORMATION** before disconnecting battery.

MODEL APPLICATION


Model	Year
Blazer	1999-01
Bravada	1999-01
Envoy	1999-00
Jimmy	1999-01
Sonoma Pickup	1999-01
S10 Pickup	1999-01

INSTRUMENT PANEL FUSE BLOCK

NOTE: Instrument panel fuse block is located behind driver's side of instrument panel. See Fig. 1 .

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

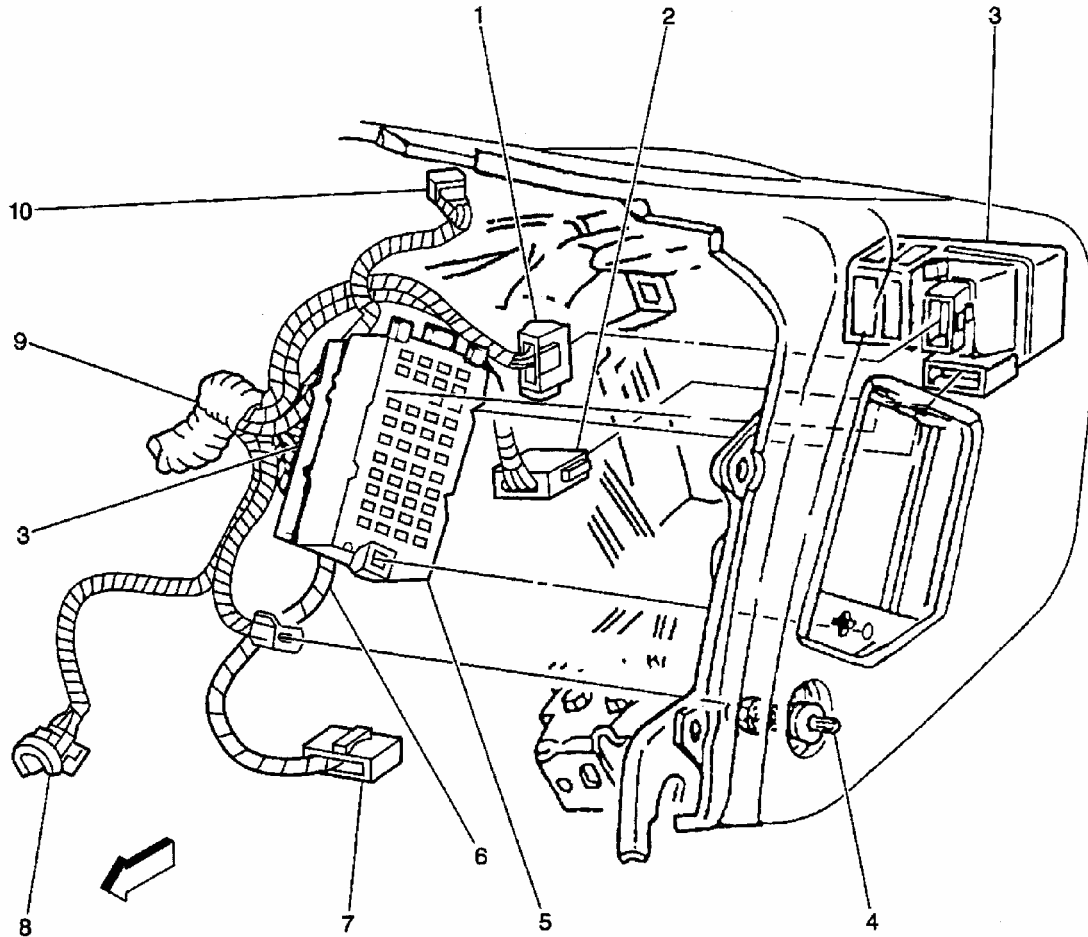


- | | |
|--------------------------------|-------------------------------|
| (1) Headlamp Switch Connector | (6) S204 |
| (2) Fog Lamp Switch Connector | (7) C217 |
| (3) Headlamp Switch | (8) Courtesy Lamp, LH Console |
| (4) Door Jamb Switch, LH Front | (9) S223 |
| (5) IP Fuse Block | (10) IP Speaker, LH |

G00096614

Fig. 1: Locating Instrument Panel Fuse Block
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

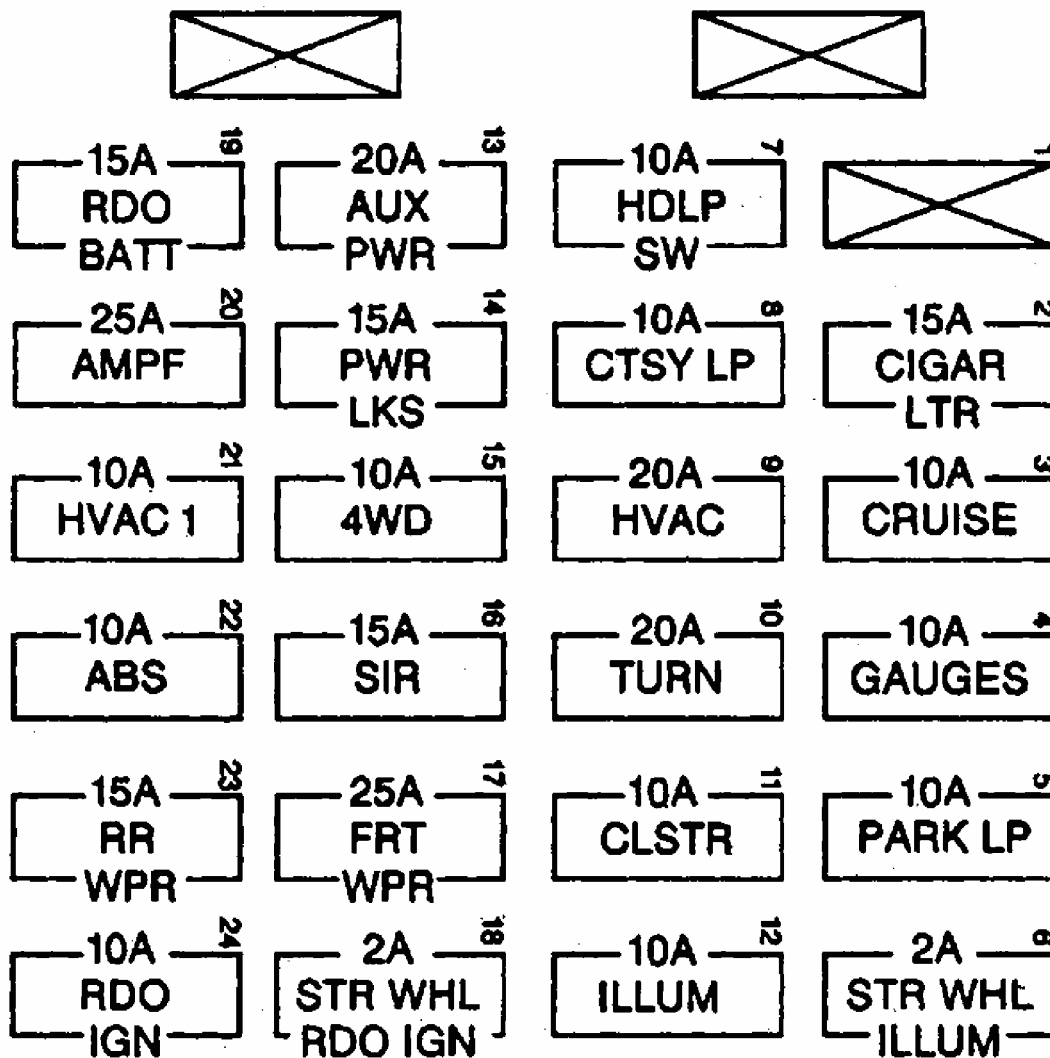

G00098606

Fig. 2: Identifying Instrument Panel Fuse Block Components
 Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

Fuse No.	Fuse/Circuit Breaker	Rating	Description
1	—	—	Not Used
2	CIGAR LTR	15A	Cigar Lighter and Data Link Connector (DLC)
3	CRUISE	10A	Body Control Module (BCM), Cruise Control Module (CCM), Multifunction Switch (Cruise Control Switch), and LH, RH Lumbar Switch (Utility w/Heated Seats, w/o Memory)
4	GAUGES	10A	Body Control Module (BCM), and Instrument Cluster
5	PARK LP	10A	Body Control Module (BCM), Outside Rear View Mirror Switch, Door Lock and Side Window Switch LH and RH, Side Window Lockout Switch, and Rear Seat Audio Control (Envoy only), IP Ashtray Lamp (Except Envoy)
6	STR WHL ILLUM	2A	Steering Wheel Controls (Utility Only)
7	HDLP SW	10A	Headlamp Switch
8	CTSY LP	10A	Console Courtesy Lamps, LH and RH, Inadvertent Power Lamp Relay, and Transfer Case Shift Control Module (NP1)
9	HVAC	20A	Heater Controller (Non-A/C - w/o Electronic Climate Control) and Heater and A/C Controller (w/ A/C - w/o Electronic Climate Control)
10	TURN	20A	Multifunction Switch (Hazard Switch)
11	CLSTR	10A	Instrument Cluster, Powertrain Control Module (PCM) (2.2L), Vehicle Control Module (VCM) (4.3L), Brake Transmission Shift Interlock (BTSI) Solenoid (4.3L w/Floor Shift A/T), and Automatic Transmission
12	ILLUM	10A	Radio, Heater Controller (Non-A/C)(Pickup only), Heater and A/C Controller (w/ A/C), Electronic Climate Control (ECC) Module (Utility, w/Auto A/C), Fog Lamp Switch, Rear Wiper/Washer and Endgate/Liftgate window Release Switch (Utility), Driver Information Display Module (Utility), Automatic Transmission Position Indicating Lamp (Utility, w/Floor Shift A/T), Supplemental Restraint IP Module Switch (Pickup), Body Control Module (BCM), Transfer Case Select Switch, and Instrument Cluster
13	AUX PWR	20A	Auxiliary Power Outlet, LH and RH, Auxiliary Power Receptacle, Floor Console (Envoy), Auxiliary Power Receptacle Rear, (Envoy)
14	PWR LKS	15A	Door Lock Relay, Door Unlock Relay, and Driver Door Unlock Relay (w/Power Door Locks)
15	4WD	10A	Vehicle Control Module (VCM), Transfer Case Shift Control Module, Transfer Case Select Switch (w/Electric Shift 4WD), Front Drive Axle Clutch Solenoid (w/Electric Shift 4WD), and Front Axle Switch (w/Electric Shift 4WD)
16	SIR	15A	Supplemental Restraint IP Module Switch, and Supplemental Restraint Sensing and Diagnostic Module (SDM)
17	FRT WPR	25A	Windshield Wiper Motor, and Multifunction Switch (Wiper Switch)
18	STR WHL RDO IGN	2A	Steering Wheel Controls (Utility only)
19	RDO BATT	15A	Radio, Instrument Cluster, Electronic Climate Control (ECC) Module (w/ECC), Vehicle Interface unit (Envoy w/ECC only), Remote Audio Player, (Bravada w/ECC only)
20	AMPF	25A	Amplifier (w/Premium Audio)
21	HVAC 1	10A	Air Temperature Valve Sensor and Motor, Heater Controller (Pickup), Heater and A/C Controller, Inside Rear View Mirror (Utility w/Automatic Day - Night Mirror), Electronic Climate Control (ECC) Module (Utility w/ECC), Inside Air Temperature Sensor (Utility w/ECC), Inside Air Temperature Sensor (Utility w/ECC), HVAC Solenoid Assembly (Utility w/ECC)
22	ABS	10A	TCC/Stop Lamp Switch, and Electronic Brake Control Module (EBCM)
23	RR WPR	15A	Rear Wiper/Washer Switch and Endgate/liftgate Window Release Switch (Utility only)
24	RDO IGN	10A	Radio, Driver Information Display Module (Utility only), Rear Audio Module (Envoy only), Vehicle Interface Unit (VIU) (Envoy only), and Outside Rear View Mirror Switch (Envoy only)

G00098607

Fig. 3: Instrument Panel Fuse Block Legend
Courtesy of GENERAL MOTORS CORP.


BODY RELAY BLOCK

NOTE: Body relay block is attached to back of instrument panel fuse

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

block. Instrument panel fuse block is located behind driver's side of instrument panel. See Fig. 1 .

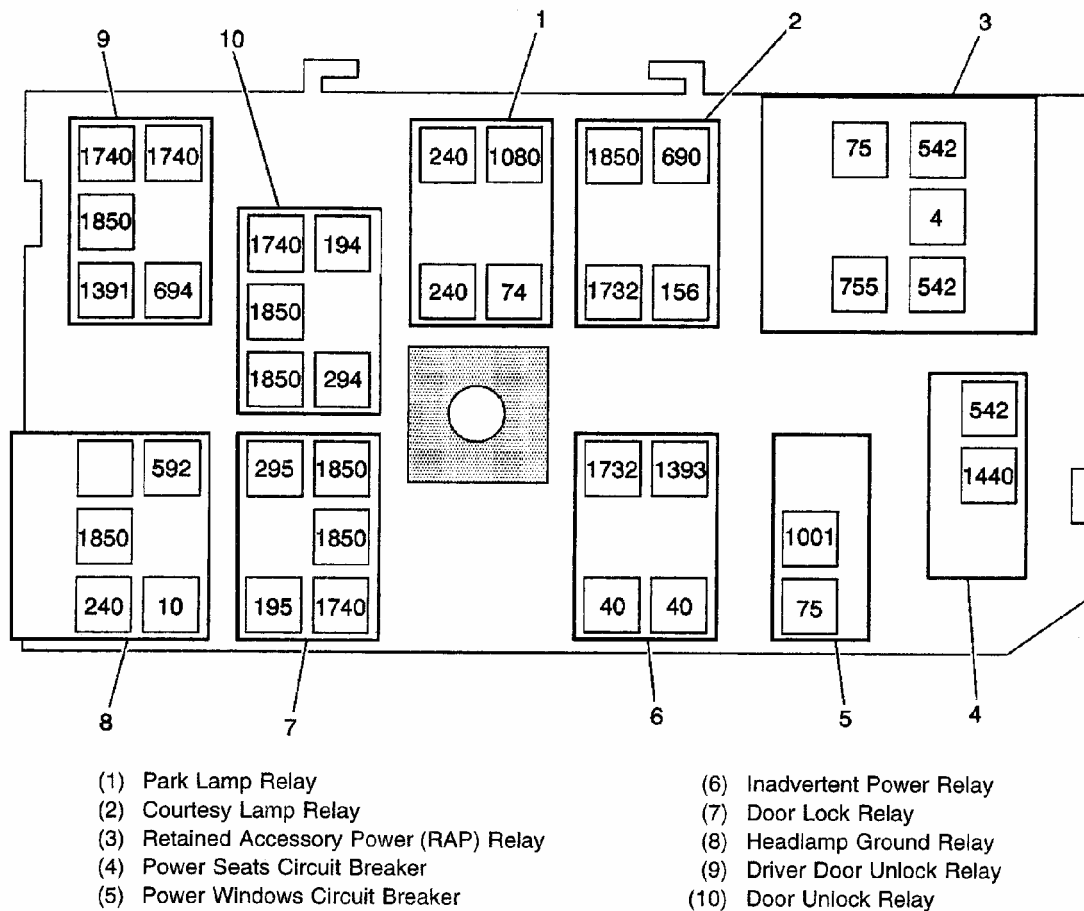


G00016224

Fig. 4: Identifying Body Relay Block Components (Except Envoy)
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

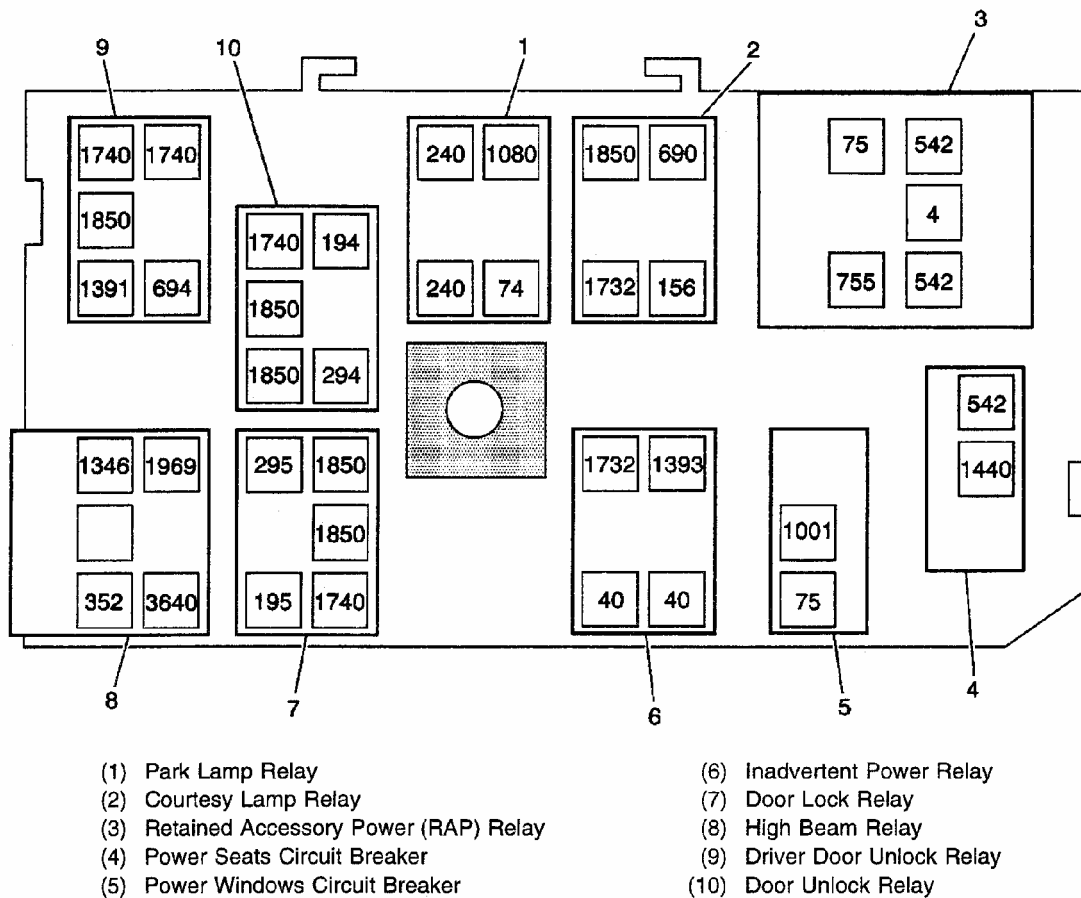

G00016225


Fig. 5: Identifying Body Relay Block Components (Envoy)
Courtesy of GENERAL MOTORS CORP.

UNDERHOOD FUSE BLOCK

NOTE: Underhood fuse block is located on driver's side of engine compartment. See Fig. 6 .

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

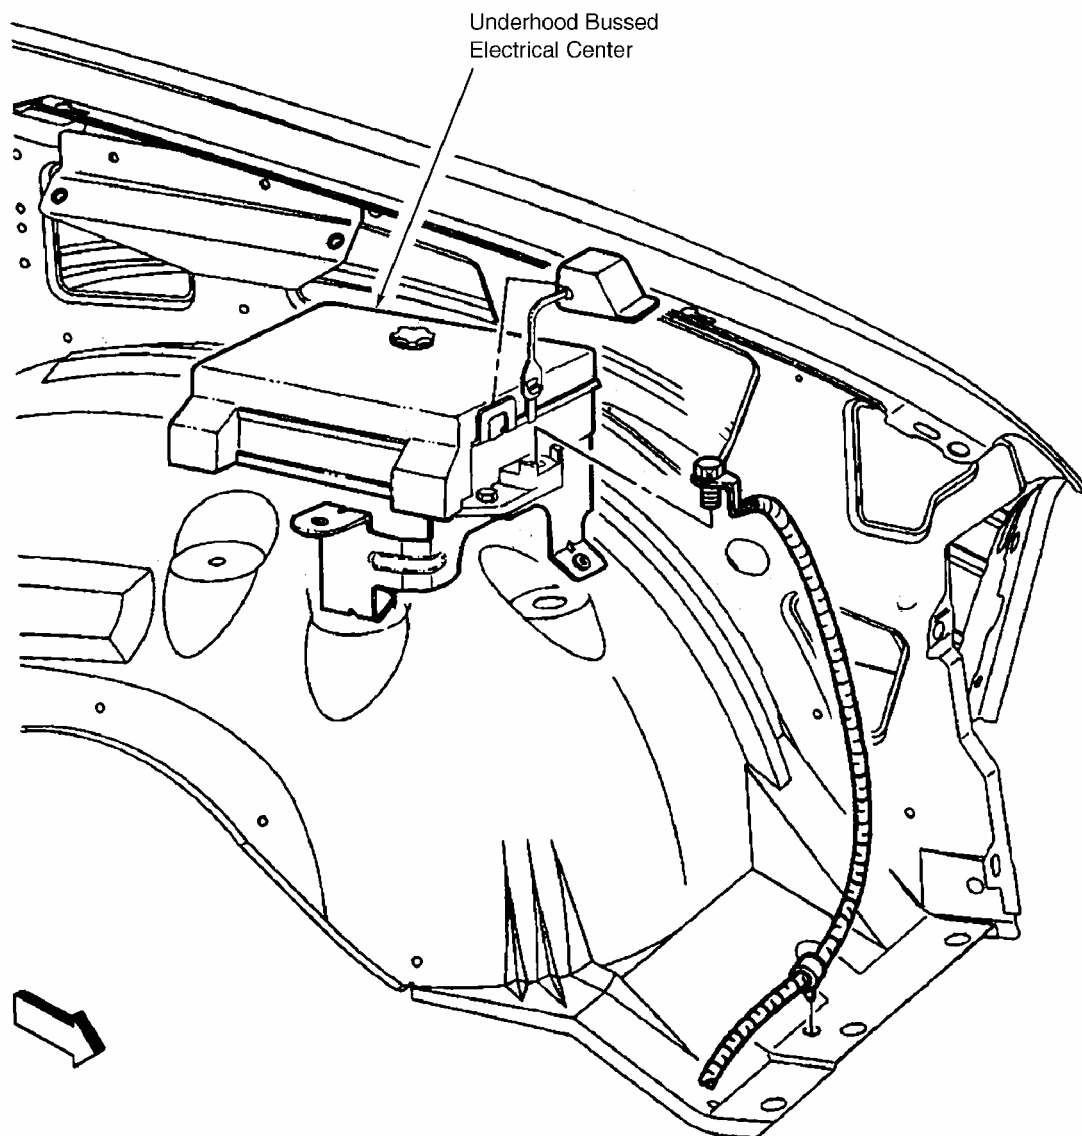


G00098597

Fig. 6: Locating Underhood Fuse Block
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

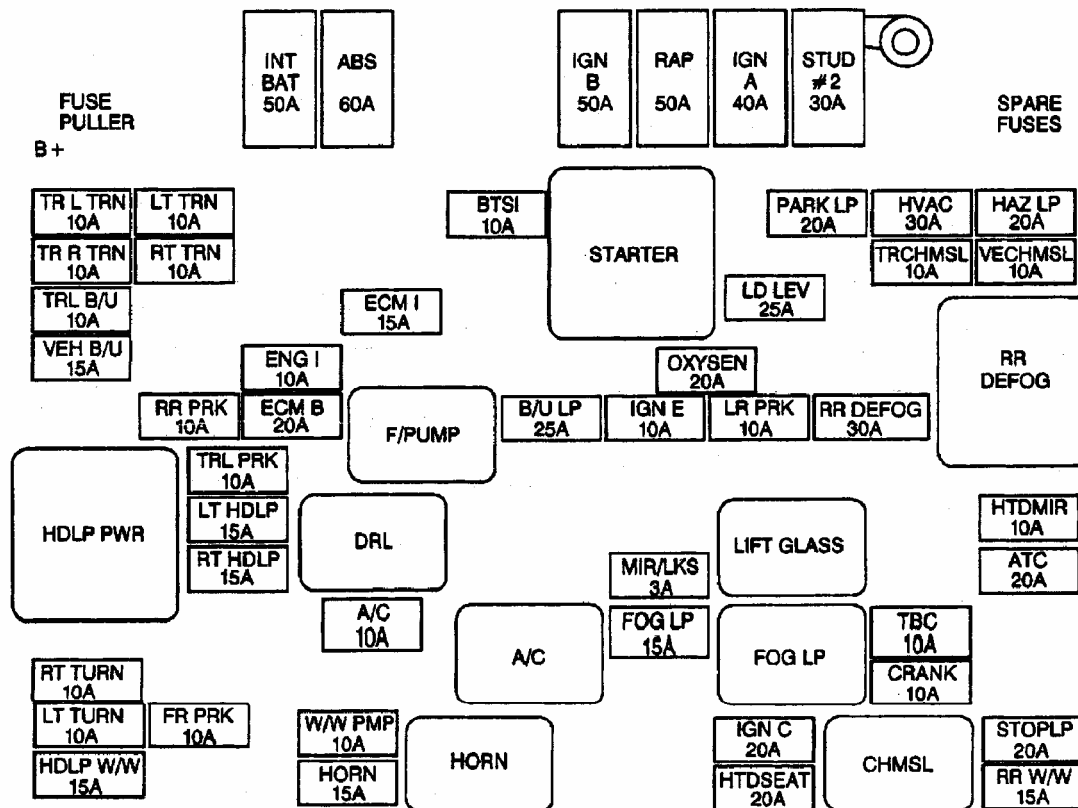

G00098608

Fig. 7: Identifying Underhood Fuse Block Components (Except Envoy)
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

Fuse/Circuit Breaker	Rating	Description
Maxi Fuses		
INT BATT	50A	HDLP SW, AUX PWR, RDO BATT, CIGAR LTR, CTSY LP, and PWR LKS Fuses, and AMPF Fuse (w/Premium Audio)
ABS	60A	Electronic Brake Control Module (EBCM)
IGN B	50A	Ignition Switch
RAP	50A	Retained Accessory Power (RAP) Relay
IGN A	40A	Starter Relay and Ignition Switch
STUD #2	30A	Not Used
Mini Fuses		
TRL TRN	10A	Not Used
LT TRN	10A	Park and Turn Signal Lamp, LH Rear
BTSI	10A	TCC/Stop Lamp Switch, and Transfer Case Shift Control Module (w/NP1)
PARK LP	20A	Park Lamp Relay, Headlamp Grounding Relay, and Headlamp Switch
HVAC	30A	Blower Motor Relay
HAZ LP	20A	Multifunction Switch (Hazard)
TRR TRN	10A	Not Used
RT TRN	10A	Park and Turn Signal Lamp, RH Rear
TRCHMSL	10A	Not Used
VECHMSL	10A	Dome and High Mounted Stop Lamp, and Cruise Control Module (CCM)
TRL B/U	10A	Not Used
ECM 1	15A	Ignition Control Module (ICM), Powertrain Control Module (PCM) (2.2L only), Vehicle Control Module (VCM) (4.3L only), Crankshaft Position (CKP) Sensor, Fuel Injectors 1-6 (4.3L only), and Ignition Coil (4.3L only)
LD LEV	25A	Not Used
VEH B/U	15A	Backup Lamps, RH and LH
ENG 1	10A	Evaporative Emission Canister Purge Valve (EVAP), Evaporative Emission Canister Vent Valve (EVAP), Mass Air Flow (MAF) Sensor (4.3L), and Camshaft Position (CMP) Sensor (4.3L)
OXYSEN	20A	Heated Oxygen Sensor (HO2S) Bank 1 Sensor 1, Heated Oxygen Sensor (HO2S) Bank 1 Sensor 3 (4.3L only), Heated Oxygen Sensor (HO2S) Bank 2 Sensor 1 (4.3L only)
RR PRK	10A	RH Rear License Plate Lamp, RH Rear Side Marker Lamp, and RH Rear Park and Turn Signal Lamp
ECM B	20A	Fuel Pump Relay, Powertrain Control Module (PCM) (2.2L), Vehicle Control Module (VCM) (4.3L)
B/U LP	25A	Backup Lamp Switch / Park Neutral Position Switch
IGN E	10A	A/C Compressor Clutch Relay, Air Relay (w/California Emissions only)
LR PRK	10A	LH Rear License Plate Lamp, LH Rear Side Marker Lamp, and LH Rear Park and Turn Signal Lamp
RR DFOG	30A	Not Used
TRL PRK	10A	Not Used
LT HDLP	15A	LH Low Beam Headlamp, and Daytime Running Lamp (DRL) Relay
HTDMIR	10A	Not Used
RT HDLP	15A	Low Beam Headlamp, RH, and High Beam Headlamp, RH
MIR/LKS	3A	Outside Rear View Mirror Switch, Door Lock and Side Window Switch, LH, and Door Lock and Side Window Switch, RH
ATC	20A	Transfer Case Shift Control Module, and Transfer Case Encoder Motor (w/o NP1)
A/C	10A	Not Used
FOG LP	15A	Fog Lamp Relay, and Daytime Running Lamps (DRL) Relay
TBC	10A	Body Control Module (BCM), Remote Control Door Lock Receiver, and Multifunction Switch (Flash to Pass)
RT TURN	10A	Park and Turn Signal Lamp, RH, Side Marker Lamp, RH
CRANK	10A	Transfer Case Shift Control Module, Clutch Pedal Position Switch (M/T Only), and Park / Neutral Position Switch (A/T Only)
LT TURN	10A	Park and Turn Signal Lamp, LH, Side Marker Lamp, LH
FR PRK	10A	Park and Turn Signal Lamps, LH and RH, Side marker Lamps, LH and RH
W/W PMP	10A	Not Used
IGN C	20A	Ignition Switch
STOP LP	20A	CHMSL Relay, and TCC/Stop Lamp Switch
HDLP W/W	15A	Not Used
HORN	15A	Horn, LH and RH
HTDSEAT	20A	Not Used
RR W/W	15A	Not Used
Micro Relays		
F/Pump	—	Power Supply to the Fuel Pump, and Fuel Injectors (2.2L)
DRL	—	Power Supply to the LH High Beam Headlamp. When Activated Supplies Ground to the Daytime Running Lamps (DRL)
Lift Glass	—	Not Used
A/C	—	Not Used
FOG LP	—	Not Used
Horn	—	Power Supply to the Horn fuse
CHMSL	—	Power Supply to the Multifunction Switch to supply the LT TURN, RT TURN, RT TRN, and LT TRN fuses
Mini Relays		
Starter	—	Power Supply to the Starter Solenoid (Coil)
RR DFOG	—	Not Used
HDLP PWR	—	Power Supply to the RT HDLP, and LT HDLP fuses

G00098609

Fig. 8: Underhood Fuse Block Legend (Base & Uplevel Pickup)
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups


Fuse/Circuit Breaker	Rating	Description
Maxi Fuses		
INT BATT	50A	HDLF SW, AUX PWR, RDO BATT, CIGAR LTR, CTSY LP, and PWR LKS Fuses, and AMPF Fuse (w/Premium Audio)
ABS	60A	Electronic Brake Control Module (EBCM)
IGN B	50A	Ignition Switch
RAP	50A	Retained Accessory Power (RAP) Relay
IGN A	40A	Starter Relay and Ignition Switch
STUD #2	30A	Not Used
Mini Fuses		
TRL TRN	10A	Not Used
LT TRN	10A	Park and Turn Signal Lamp, LH Rear
BTSI	10A	TCC/Stop Lamp Switch, and Transfer Case Shift Control Module (w/NP1)
PARK LP	20A	Park Lamp Relay, Headlamp Grounding Relay, and Headlamp Switch
HVAC	30A	Blower Motor Relay
HAZ LP	20A	Multifunction Switch (Hazard)
TRR TRN	10A	Not Used
RT TRN	10A	Park and Turn Signal Lamp, RH Rear
TRCHMSL	10A	Not Used
Fuse/Circuit Breaker		
VECHMSL	10A	Dome and High Mounted Stop Lamp, and Cruise Control Module (CCM)
TRL B/U	10A	Not Used
ECM 1	15A	Ignition Control Module (ICM), Powertrain Control Module (PCM) (2.2L only), Vehicle Control Module (VCM) (4.3L only), Crankshaft Position (CKP) Sensor, Fuel Injectors 1-6 (4.3L only), and Ignition Coil (4.3L only)
LD LEV	25A	Not Used
VEH B/U	15A	Backup Lamps, RH and LH
ENG 1	10A	Evaporative Emission Canister Purge Valve (EVAP), Evaporative Emission Canister Vent Valve (EVAP), Mass Air Flow (MAF) Sensor (4.3L), and Camshaft Position (CMP) Sensor (4.3L)
OXYSEN	20A	Heated Oxygen Sensor (HO2S) Bank 1 Sensor 1, Heated Oxygen Sensor (HO2S) Bank 1 Sensor 3 (4.3L only), Heated Oxygen Sensor (HO2S) Bank 2 Sensor 1 (4.3L only)
RR PRK	10A	RH Rear License Plate Lamp, RH Rear Side Marker Lamp, and RH Rear Park and Turn Signal Lamp
ECM B	20A	Fuel Pump Relay, Powertrain Control Module (PCM) (2.2L), Vehicle Control Module (VCM) (4.3L)
B/U LP	25A	Backup Lamp Switch / Park Neutral Position Switch
IGN E	10A	A/C Compressor Clutch Relay, Air Relay (w/California Emissions only)
LR PRK	10A	LH Rear License Plate Lamp, LH Rear Side Marker Lamp, and LH Rear Park and Turn Signal Lamp
RR DFOG	30A	Not Used
TRL PRK	10A	Not Used
LT HDLP	15A	LH Low Beam Headlamp, and Daytime Running Lamp (DRL) Relay
HTDMIR	10A	Not Used
RT HDLP	15A	Low Beam Headlamp, RH, and High Beam Headlamp, RH
MIR/LKS	3A	Outside Rear View Mirror Switch, Door Lock and Side Window Switch, LH, and Door Lock and Side Window Switch, RH
ATC	20A	Transfer Case Shift Control Module, and Transfer Case Encoder Motor (w/o NP1)
A/C	10A	A/C Compressor Clutch Relay
FOG LP	15A	Fog Lamp Relay, and Daytime Running Lamps (DRL) Relay
TBC	10A	Body Control Module (BCM), Remote Control Door Lock Receiver, and Multifunction Switch (Flash to Pass)
RT TURN	10A	Park and Turn Signal Lamp, RH, Side Marker Lamp, RH
CRANK	10A	Transfer Case Shift Control Module, Clutch Pedal Position Switch (M/T Only), and Park / Neutral Position Switch (A/T Only)
LT TURN	10A	Park and Turn Signal Lamp, LH, Side Marker Lamp, LH
RR PRK	10A	Park and Turn Signal Lamps, LH and RH, Side marker Lamps, LH and RH
W/W PMP	10A	Not Used
IGN C	20A	Ignition Switch
STOP LP	20A	CHMSL Relay, and TCC/Stop Lamp Switch
HDLF W/W	15A	Not Used
HORN	15A	Horn, LH and RH
HTDSEAT	20A	Not Used
RR W/W	15A	Not Used
Fuse/Circuit Breaker		
Micro Relays		
F/Pump	—	Power Supply to the Fuel Pump, and Fuel Injectors (2.2L)
DRL	—	Power Supply to the LH High Beam Headlamp. When Activated Supplies Ground to the Daytime Running Lamps (DRL)
Lift Glass	—	Liftgate/Endgate Window Release Actuator
A/C	—	Power Supply to the A/C compressor Clutch
FOG LP	—	Power Supply to the Fog Lamps and Fog Lamp Switch
Horn	—	Power Supply to the Horn fuse
CHMSL	—	Not Used
Mini Relays		
Starter	—	Power Supply to the Starter Solenoid (Coil)
RR DEFOG	—	RR DEFOG, and HTD MIR fuses
HDLF PWR	—	Power Supply to the RT HDLP, and LT HDLP fuses

G00098611

Fig. 9: Underhood Fuse Block Legend (Uplevel Utility)
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

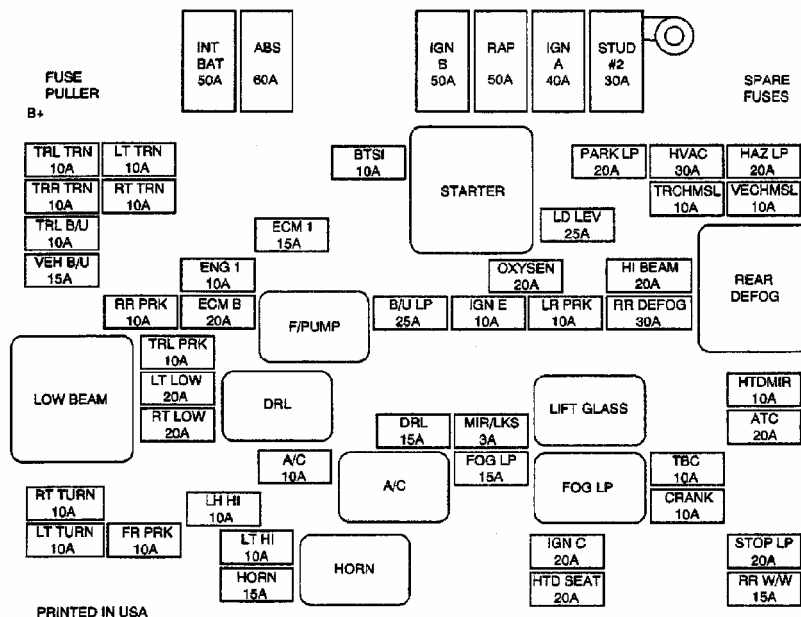

Underhood Fuse Block Details (Envoy)

Fuse/Circuit Breaker	Rating	Description
MaxiFuses		
INT BATT	60A	HDLP SW, AUX PWR, RDO BATT, CIGAR LTR, CTSY LP, and PWR LKS Fuses, and AMPF Fuse (w/Premium Audio)
ABS	60A	Electronic Brake Control Module (EBCM)
IGN B	50A	Ignition and Start Switch
RAP	50A	Retained Accessory Power (RAP) Relay, POWER SEATS Circuit Breaker (w/Power Seats)
IGN A	40A	Starter Relay and Ignition and Start Switch
STUD #2	30A	Trailer Wiring Provision (Power Aux)
Mini Fuses		
TRL TRN	10A	Trailer Wiring Provision (LP - Stop, T/Sig - LH)
LT TRN	10A	Upper and Lower Park and Turn Signal Lamp, LH Rear
BTSI	10A	Stoptlamp Switch, and Automatic Transmission Shift Lock Solenoid
PARK LP	20A	Park Lamp Relay, and Headlamp Switch
HVAC	30A	Blower Motor Control Module
HAZ LP	20A	Multifunction Switch (Hazard)
TRR TRN	10A	Trailer Wiring Provision (LP - Stop, T/Sig - RH)
RT TRN	10A	Upper and Lower Park and Turn Signal Lamp, RH Rear
TRCHMSL	10A	Trailer Wiring Provision (LP - High MT Stop)

G00016223

Fig. 10: Identifying Underhood Fuse Block Components (Envoy)
Courtesy of GENERAL MOTORS CORP.

2001 Chevrolet S10 Pickup

1999-01 ELECTRICAL Fuses & Circuit Breakers - S & T Series Pickups

Fuse/Circuit Breaker	Rating	Description
Maxi Fuses		
INT BATT	90A	HDLR SW, AUX PWR, RDO BATT, CIGAR LTR, CTSY LP, and PWR LKS Fuses, and AMPF Fuse (w/Premium Audio)
ABS	90A	Electronic Brake Control Module (EBCM)
IGN B	50A	Ignition Switch
Fuse/Circuit Breaker		
RAP	50A	Retained Accessory Power (RAP) Relay, POWER SEATS Circuit Breaker (w/Power Seats)
IGN A	40A	Starter Relay and Ignition Switch
STUD #2	30A	Trailer Wiring Provision (Power Aux)
Mini Fuses		
TRL TRN	10A	Trailer Wiring Provisions (LP - Stop, T/Sig - LH)
LT TRN	10A	Upper and Lower Park and Turn Signal Lamp, LH Rear
BTSI	10A	TCC/Stop Lamp Switch, Transfer Case Shift Control Module (w/NP1), and Brake Transmission Shift Interlock (BTSI) Solenoid (w/Floor Shift A/T Only)
PARK LP	20A	Park Lamp Relay, and Headlamp Switch
HVAC	30A	Blower Motor Relay (w/electronic Climate Control), Blower Motor (w/electronic Climate Control)
HAZ LP	20A	Multifunction Switch (Hazard)
TRR TRN	10A	Trailer Wiring Provisions (LP - Stop, T/Sig - RH)
RT TRN	10A	Upper and Lower Park and Turn Signal Lamp, RH Rear
TRCHMSL	10A	Trailer Wiring Provisions (LP - High MT Stop)
VECHMSL	10A	High Mount Stop Lamp, High Mount Stop Lamp Resistor, and Cruise Control Module (CCM)
TRL B/U	10A	Trailer Wiring Provisions (LP - B/U)
ECM 1	15A	Ignition Control Module (ICM), Powertrain Control Module (PCM) (2.2L only), Vehicle Control Module (VCM) (4.3L only), Crankshaft Position (CKP) Sensor, Fuel Injectors 1-6 (4.3L only), and Ignition Coil (4.3L only)
LD LEV	25A	Load Leveling Pump, Load Leveling Timer Relay
VEH B/U	15A	Backup Lamps, RH and LH, Inside Rear View Mirror (w/Automatic Day - Night Mirror Only)
ENG 1	10A	Evaporative Emission Canister Purge Valve (EVAP), Evaporative Emission Canister Vent Valve (EVAP), Mass Air Flow (MAF) Sensor (4.3L), and Camshaft Position (CMP) Sensor (4.3L)
OXYSEN	20A	Heated Oxygen Sensor (HO2S) Bank 1 Sensor 1, Heated Oxygen Sensor (HO2S) Bank 1 Sensor 3 (4.3L only), Heated Oxygen Sensor (HO2S) Bank 2 Sensor 1 (4.3L only)
HI BEAM	20A	High Beam Relay
RR PRK	10A	Park and Turn Signal Lamps, RR Upper, RR Lower
ECM B	20A	Fuel Pump Relay, Powertrain Control Module (PCM) (2.2L), Vehicle Control Module (VCM) (4.3L)
B/U LP	25A	Backup Lamp Switch / Park Neutral Position Switch
IGN E	10A	A/C Compressor Clutch Relay, Air Relay (w/California Emissions only), Rear Defogger Relay, DRL Relay, Load Leveling Height Sensor, and Load Leveling Pump
LR PRK	10A	Park and Turn Signal Lamps, LR Upper, LR Lower
RR DFOG	30A	Rear Window Defogger Grid
TRL PRK	10A	LH, RH Rear License Plate Lamps, and Trailer Wiring Provisions (LP Park)
LT LOW	20A	Headlamp Ballast, LH (HID)
HTD MIR	10A	Outside Rearview Mirror, RH, LH (Heating Element)
RT LOW	20A	Headlamp Ballast, RH (HID)
MIR/LKS	3A	Outside Rear View Mirror Switch, Door Lock and Side Window Switch, LH, and RH, LH Glass Relay, Liftgate or Endgate Lock Cylinder Switch
ATC	20A	Transfer Case Shift Control Module, and Transfer Case Encoder Motor (w/o NP1)
A/C	10A	A/C Compressor Clutch Relay
FOG LP	15A	Fog Lamp Relay
TBC	10A	Body Control Module (BCM), Remote Control Door Lock Receiver, and Multifunction Switch (Flash to Pass)
Fuse/Circuit Breaker		
RT TURN	10A	Park and Turn Signal Lamp, RH, Side Marker Lamp, RH
LT HI	10A	LH High Beam Headlamp
CRANK	10A	Transfer Case Shift Control Module, Clutch Pedal Position Switch (MT Only), and Park / Neutral Position Switch (A/T Only)
LT TURN	10A	Park and Turn Signal Lamp, LH, Side Marker Lamp, LH
RR PRK	10A	Park and Turn Signal Lamps, LH and RH, Side marker Lamps, LH and RH
RT HI	10A	RH High Beam Headlamp
IGN C	20A	Ignition Switch
STOP LP	20A	TCC/Stop Lamp Switch
HORN	15A	Horn, LH and RH
HTD SEAT	20A	Seat Heater Module, LH, RH (w/Heated Seats), Lumbar Switch, RH, LH (w/Heated Lumbar)
RR W/W	15A	Rear Window Wiper Motor
Micro Relays		
F/Pump	—	Power Supply to the Fuel Pump, and Fuel Injectors (2.2L)
DRL	—	Power Supply to the RH High Beam Headlamp. When Activated Supplies Ground to the Daytime Running Lamps (DRL)
Lift Glass	—	Liftgate/Endgate Window Release Actuator
A/C	—	Power Supply to the A/C compressor Clutch
FOG LP	—	Power Supply to the Fog Lamps and Fog Lamp Switch
Horn	—	Power Supply to the Horn fuse
Mini Relays		
Starter	—	Power Supply to the Starter Solenoid (Coil)
RR DEFOG	—	RR DEFOG, and HTD MIR fuses
LOW BEAM	—	Power Supply to the RT LOW, and LT LOW fuses

G00098613

Fig. 11: Underhood Fuse Block Legend (Envoy)
Courtesy of GENERAL MOTORS CORP.